

FOR SMS  
TEXT MESSAGING  
YOU MUST SUBSCRIBE  
TO A CALLER DISPLAY SERVICE  
AND YOU MUST NOT WITHHOLD  
YOUR TELEPHONE NUMBER.  
A QUARTERLY FEE IS PAYABLE.



# User Guide

## BT DIVERSE 5250

SIEMENS

digitally  
enhanced




This equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.


This product is intended for connection to analogue public switched telephone networks and private switchboards in the UK.

**Please open this page for an 'At a glance' guide to your BT Diverse 5250.**

# At a glance

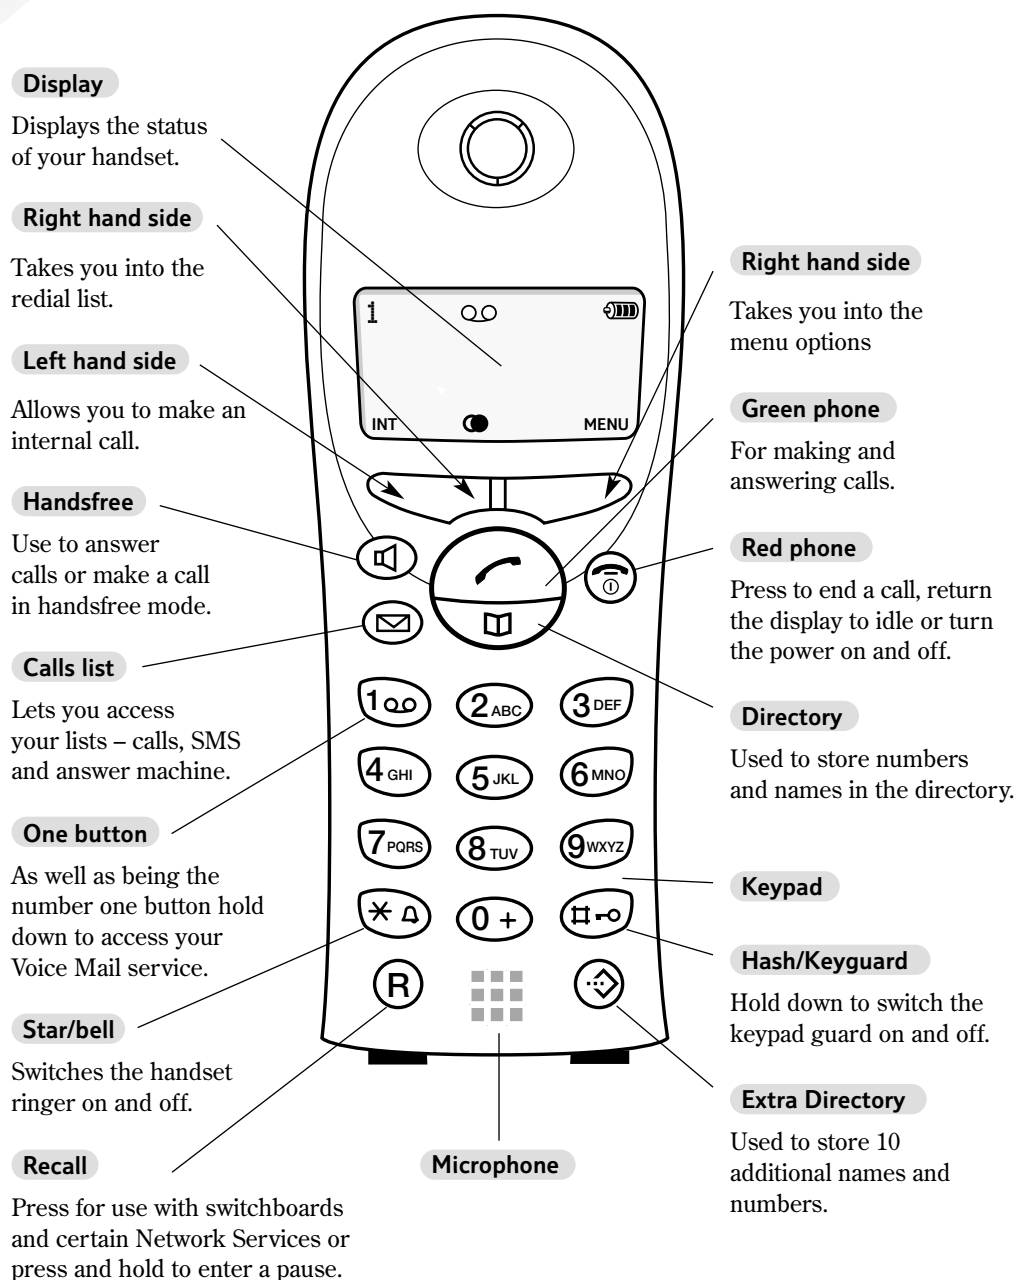

## Base

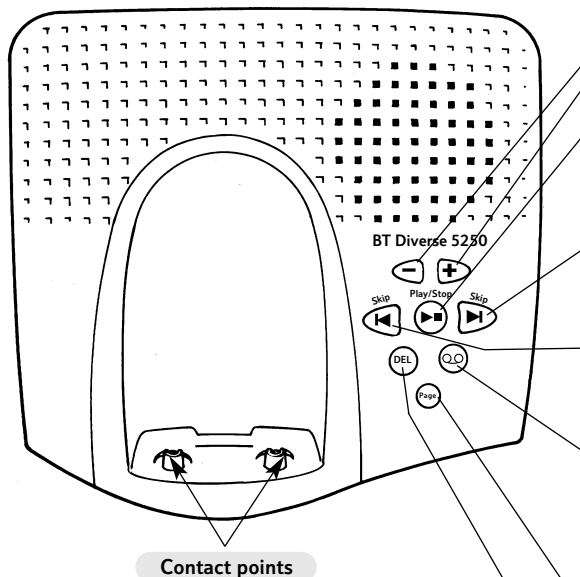

### Speaker volume

To decrease the loudspeaker volume.  
To increase the loudspeaker volume.

### Play/Stop

To playback messages.  
To stop playback.

### Skip

To play the next message.  
To skip forward to the message after next.

### Skip

To repeat the current message.  
To skip back to the previous message.

### OGM

To switch the answering machine on/off.  
Illuminates when set to Answer On.  
Flashes when you have new messages stored.


### Registration/Page button

Use to register handsets.  
Used to page a handset.

### Delete

To delete the current message.

## Base underside

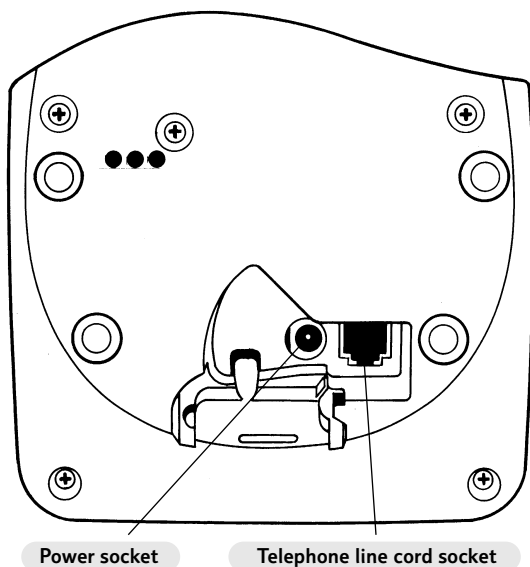

# In this guide

*Please refer to the separate Using SMS User Guide for instructions on using the SMS functionality.*

**At a glance** 1

**Main menu structure** 4

Messages 5

**Quick guide to handset** 6

**Quick guide to handset display icons** 7

**Introduction** 8

Unpacking your BT Diverse 5250 8

For your records 8

**Safety information** 9

**Setting up** 10

**Using the telephone** 14

Making and ending calls 14

Handsfree 15

Using the directory 16

Character map 17

Redial 19

Secrecy 20

Paging and internal calls 21

**Caller Display and other**

**BT Calling Features** 23

Caller Display 23

Calls list 23

Call Waiting 26

Other BT Calling Features 26

**Additional features** 29

Voice Mail 29

**Handset settings** 31

**Base Station settings** 36

Base Station PIN 37

**Setting up and personalising your answering machine** 40

**Outgoing messages** 40

Answer delay 44

Setting the message length 45

Call screening 46

Quick access button setting 46

**Using the BT Diverse 5250 answering machine via the base unit** 47

New message indicator 48

**Using the BT Diverse 5250 answering machine via the handset** 49

New message indicator 50

Playing messages 50

**Remote access** 53

**Using additional handsets and bases** 54

Registering additional handsets 54

**Help** 57

**General information** 59

Guarantee 59

Accessories and replacement items 59

Technical information 60

Switchboard compatibility 60


Setting pauses 62

**Index** 63


## Hints and tips boxes

*In this user guide, we've included helpful tips and important notes. They are shown in boxes like this.*


## Main menu

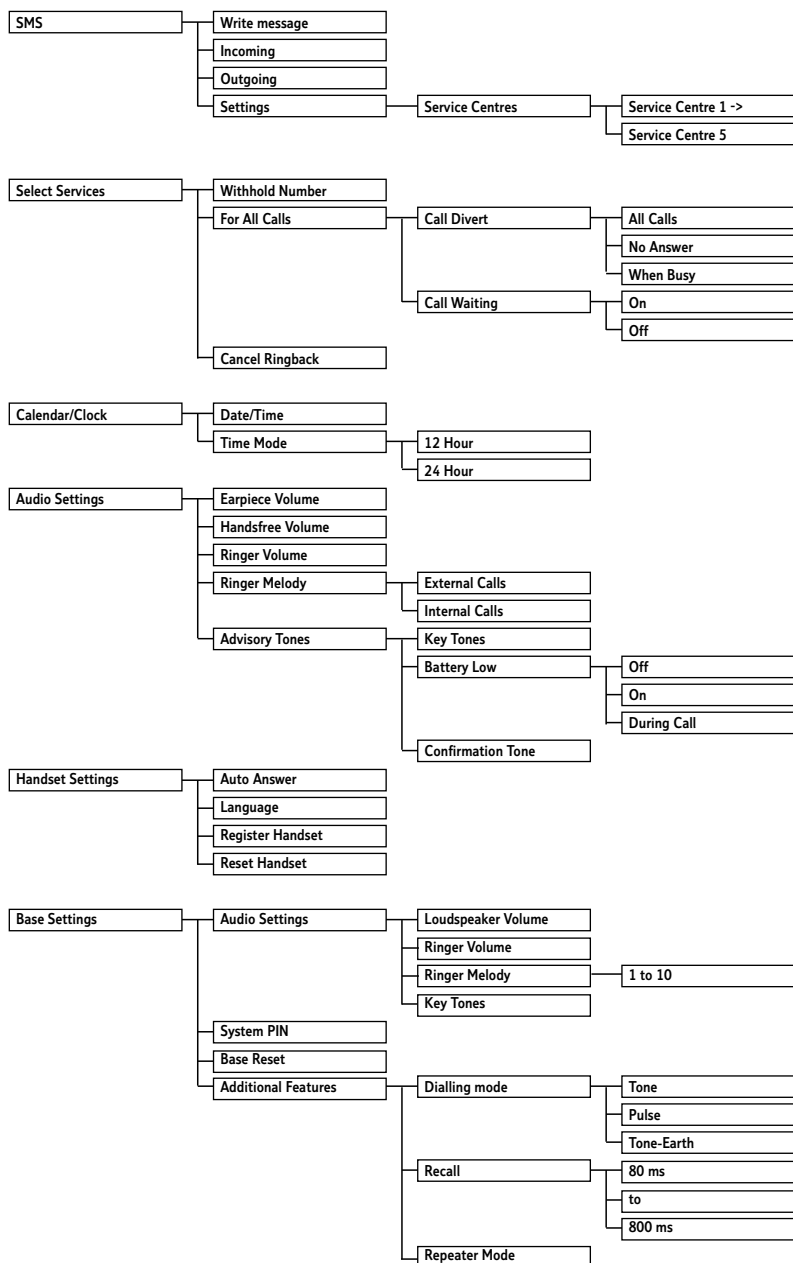


## Main menu continued

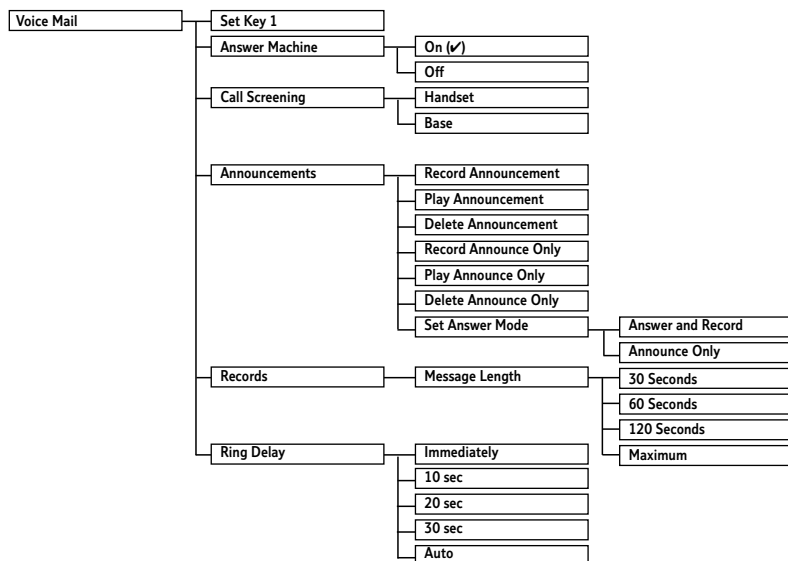

## Messages

Press  to get to your Mailbox and access your text messages, voicemail and Calls list.



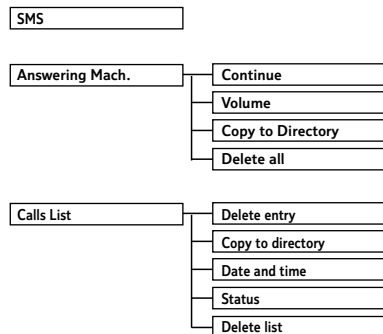


















 




 


 

 

 





 








The following functions are available:



### Note

*If you make a mistake, you can return to the previous menu by pressing the **RED PHONE** button. If you keep pressing the **RED PHONE** button you will return to the idle screen.*

# Quick guide to handset

		Page no
Switch the handset OFF/ON: (default is ON)	 Hold down.	14
Switch Keyguard on/off	 Hold down.	34
Switch handset ringer off	 Hold down.	32
Make a call	  or   or  	14
Redial a number	   to scroll through the list  to dial.	19
Copy a displayed number in the redial list to the directory	   <b>Menu</b>   to display Copy to directory <b>OK</b> <b>OK</b> add name <b>Menu</b> display shows Save entry <b>OK</b>  .	20
Dial from the directory	   to name or number you want to dial  .	18
Dial from Calls list	   to display Calls List <b>OK</b>   to display the number you want  .	24
Adjust handsfree volume whilst in handsfree mode	<b>Menu</b> Display shows Volume <b>OK</b>   to decrease/increase volume <b>OK</b> .	15
Adjust earpiece volume	<b>Menu</b> display shows Volume <b>OK</b>   to decrease/increase volume <b>OK</b> .	31
Make internal call	<b>Int</b> then   select handset and click on  .	21
Call all handsets	<b>Int</b>   to Call All  .	21
Transfer call to another handset	<b>Int</b> then   select handset and click on  . When user answers press  .	21
Put caller on hold while you make an internal call	<b>Int</b> then   select handset and click on  . When finished press <b>Menu</b> . Back will be selected press <b>OK</b> .	22
Set date and time	<b>Menu</b>   to display Calendar/Clock <b>OK</b> to display Date/Time <b>OK</b> enter date <b>OK</b> enter time <b>OK</b> . Select am/pm <b>OK</b> .	13



# Quick guide to handset display icons



Redial, lists up to the last 10 dialled number.



Flashes to indicate new messages (e.g. Calls or SMS).  
Remains constant when you have old messages stored.

INT

For calling other handsets.

MENU

Opens the menu.



Shows the status of the handset battery.



Scroll through the menu.

OK

Confirms the function displayed.



Scroll left and right when entering numbers or messages.



Deletes numbers/characters (from right to left).



Ringer off.



Keypad locked.

eg. 1

Shows the number of the handset and is displayed in top left hand corner.



Answering machine set to ON.



Crescendo tone.

## Helpline

*If you experience any difficulties with your BT Diverse 5250, please call the BT Diverse Helpline on **08457 908 070**.*

**BT Diverse Helpline – 08457 908 070**

# Introduction

## Unpacking your BT Diverse 5250

If anything is missing, please contact your place of purchase immediately.

One BT Diverse 5250 base station



One BT Diverse 5200 handset




One power supply for the base station



One telephone line cord



Two AAA rechargeable batteries

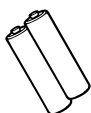

One belt clip



Battery compartment cover



## For your records

Date of purchase:

Place of purchase:

For guarantee purposes proof of purchase is required so please keep your receipt.

Enter your system PIN code here:

--	--	--	--

For more information on your system PIN, see page 37/38.

## Helpline

*If you experience any difficulties with your BT Diverse 5250, please call the BT Diverse Helpline on 08457 908 070.*

**BT Diverse Helpline – 08457 908 070**

# Safety information

## Safety information

### General

Only use the power supply included with the product. Using an unauthorised power supply will invalidate your guarantee and may damage the telephone. Power supply number is C3928 0-Z4-C478.

For the handset use only AAA 1.2V Nickel Metal Hydride (NiMH) rechargeable batteries with a minimum capacity of 700 mAh. Never use other batteries or conventional alkaline batteries. They could lead to a short circuit or destroy the battery casing. Batteries and accessories are available from [www.withandwithoutwires.com](http://www.withandwithoutwires.com) or call **0870 240 5522**.

If the Keyguard is switched on, it is NOT possible to make calls, including emergency numbers (**999/112**).

Do not open the base station or handset (other than to change batteries). This could expose you to high voltages or other risks.

Radio signals transmitted between the handset and base may cause interference to hearing aids.

This product should not be used near emergency/intensive care medical equipment and should not be used by people with pacemakers.

Never dispose of batteries in a fire. There is a serious risk of explosion and/or the release of highly toxic chemicals.

### Cleaning

Simply clean the handset and base station with a damp (not wet) cloth, or an anti-static wipe. Never use household polish as this will damage the product. Never use a dry cloth as this may cause a static shock.

### Environmental

Do not expose to direct sunlight.

The product may heat up when the batteries are being recharged. This is normal. However, we recommend that you do not place the product on antique/veneered wood to avoid damage.

Do not stand your product on carpets or other surfaces which generate fibres, or place it in locations preventing the free flow of air over its surfaces.

Do not submerge any part of your product in water and do not use it in damp or humid conditions, such as bathrooms.

Do not expose your product to fire, explosive or other hazardous conditions.

There is a slight chance that your phone could be damaged by an electrical storm. We recommend that you unplug the power and telephone line cord during an electrical storm.

# Setting up

## Plan the location


Situate your product close enough to the telephone and mains power sockets so that the cables will reach.

Make sure it is at least 1 metre away from other electrical products to avoid interference.


Do not situate the product in the bathroom or other humid areas.

## 1 Connect the base station

Plug the power supply cable into the power socket on the underside of your base.

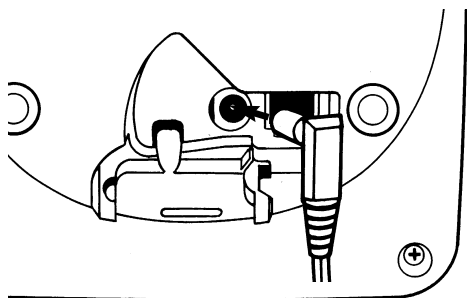

## 2 Plug the power supply unit into the wall socket

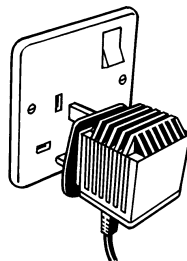

## WARNING


*Do not connect the telephone line cord to the phone socket until your handset is fully charged. This will prevent the risk of the phone being answered before the battery is charged. Answering the phone before the battery is fully charged may prevent it from reaching its optimum capacity.*

## Helpline

*If you experience any difficulties with your BT Diverse 5250, please call the BT Diverse Helpline on 08457 908 070.*


### 3 Registering and charging the handset

The display is protected by a plastic film. Remove the protective plastic film from the display.

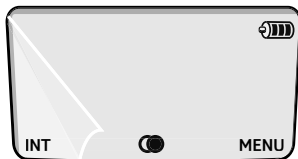

### Insert the batteries

Insert the two batteries supplied, as indicated inside the battery compartment and slide the battery compartment cover shut.

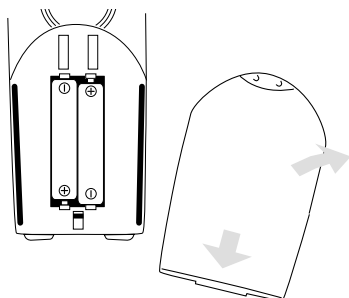

The battery cover may be found in the packaging with the batteries.

### WARNING

*Under no circumstances should non-rechargeable batteries be used. Only use AAA 1.2V Nickel Metal Hydride (NiMH) rechargeable batteries with a minimum capacity of 650mAh. Using inappropriate batteries will invalidate your guarantee and may damage the telephone. Batteries and accessories are available from [www.withandwithoutwires.com](http://www.withandwithoutwires.com) or call 0870 240 5522.*

### To register the handset

To register your handset, place it in the base station with the display facing upward. After approx. one minute, the handset's internal number is displayed (e.g.: 1). Successful registration is signalled by a confirmation tone.

When the handset is registered the display will show:



### If the icons on the display flash continuously...

*It means that the handset is not registered with the base station.*

*Ensure you have correctly carried out step 3. If the product has still not registered, please see "Registering manually" on page 55.*

*All additional handsets you purchase will need to be individually registered with the base station before they will work with the BT Diverse 5250.*

### Out of range?

*If you go out of range of a base station for a long time while your handset is switched ON, it may take more than 20 minutes to 'find' the base station again when you come back within range. However, by simply switching the handset OFF for a moment, then ON again, it will find the base station within a few seconds.*

### Battery performance

*Batteries and case may become warm during charging. This is normal.*

*Under ideal conditions, the handset batteries should give about 13 hours talktime or 170 hours standby time on a single charge. However, new NiMH batteries do not reach their full capacity until they have been in normal use for several days.*

*The charge capacity of rechargeable batteries will reduce with time as they wear out, so reducing the talk/standby time of the handset. Eventually they will need to be replaced. New batteries are available from [www.withandwithoutwires.com](http://www.withandwithoutwires.com) or call 0870 240 5522.*

*If you replace the handset batteries with ones that have been fully charged, the battery indicator will not show full until the next charge cycle has been completed. Charge the handset until the batteries register full again. From then on the display will be correct.*

Leave the handset for approx. 16 hours in the base station to charge the batteries, as they are not charged in the factory. The battery status icon flashes on the handset to indicate that the batteries are being charged.

### Battery level icons

*When the batteries are almost flat a beep sounds and the display shows the empty battery icon. You will need to recharge your handset before you can use it. The various states of charge are shown below:*

 Batteries fully charged


 Batteries at 66%

 Batteries at 33%


 Batteries empty

#### 4 Connect the telephone line cord to the base and plug into the wall socket

Ensure that each end of the line cord is fitted into the correct socket.

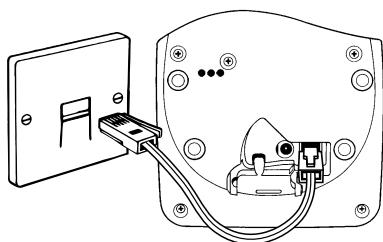

Fit the belt clip onto the back of the handset.

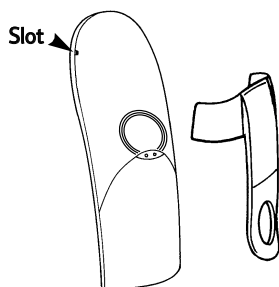

*Your BT Diverse 5250 is now ready for use.*

#### Note

*If you subscribe to a Caller Display service the time and date will be set with the first incoming call. However, the year setting will have to be changed manually. See opposite.*

#### Setting the date and time

- |             |  |
|-------------|--|
| <b>MENU</b> | Press the <b>Menu</b> options button.  |
|             | Press the <b>DOWN</b> navigation button until the display shows Calendar/Clock.                  |
| <b>OK</b>   | Press the <b>OK</b> options button. Date/Time appears.   |
| <b>OK</b>   | Press the <b>OK</b> options button.  |
|             | Enter the day/month/year, e.g. <b>05 10 03</b> for 5th October 2003.                             |
| <b>OK</b>   | Press the <b>OK</b> options button.  |
|             | Enter the time – hours/minutes, e.g. <b>0925</b> for 9:25am.                                     |
| <b>OK</b>   | Press the <b>OK</b> options button.  |
|             | Use the <b>UP/DOWN</b> navigation buttons to select am/pm if in 12 hour mode.                    |
| <b>OK</b>   | Press the <b>OK</b> options button.  |
|             | Press the <b>DOWN</b> navigation button to Time Mode.  |
| <b>OK</b>   | Press the <b>OK</b> options button.  |
|             | Use the <b>UP/DOWN</b> navigation buttons to select 12 or 24 hour display (12hr is the default). |
| <b>OK</b>   | Press the <b>OK</b> options button.  |
|             | Press the <b>RED PHONE</b> button until you reach the idle display.                              |

# Using the telephone

## Note

*To exit a menu at any time, press the **RED PHONE** button. This will take you back one step. Keep pressing the **RED PHONE** button to return to the idle screen.*

## To switch the handset power on and off



Press *and hold* the **RED PHONE** button to switch the handset off.



Press and hold the **RED PHONE** button to switch the handset on again.

## Making and ending calls

### To make an external call

Ensure the handset is switched ON.



Press the **GREEN PHONE** button. You will hear the dial tone.



Dial the number.

## Preparatory dialling



Enter the phone number first.



If you make a mistake press the **◀C** options button to remove any incorrect digits.



Press the **GREEN PHONE** button to dial the number.

## To end a call



Press the **RED PHONE** button.

## Call timer

Your handset automatically times the duration of all external calls, showing it on the display during your call and for a few seconds after it is finished.



### To receive an external call



Press the **GREEN PHONE** button to answer the call.

*Or*

If the handset is on the base, simply lift it up and speak.

You do not need to press the **GREEN PHONE** button.



This is called Autotalk. You can switch autotalk off so you always have to press the **GREEN PHONE** button to answer a call, see page 33.



## Handsfree

Handsfree allows you to talk to your caller without holding the handset and enables other people in the room to listen to the conversation. Your hands are left free, for example to take notes.

### Note

*You can test the handsfree function by dialling the BT speaking clock on 123.*

### To make a handsfree call



Dial the number



Press the **HANDSFREE** button. The loudspeaker is switched on and you hear the number being dialled.



To switch back to using the handset at any time, press the **GREEN PHONE** button.

### To adjust the handsfree volume whilst in handsfree mode

Whilst in handsfree mode and you want to increase or decrease the handsfree volume.

**MENU** Press the **MENU** options button.

**OK** Press the **OK** options button to select volume.

◀ ▶ Using the **LEFT** or **RIGHT** navigation buttons you can either increase or decrease the volume.

**OK** Press the **OK** options button if you want to save the new volume setting.

### To answer a call in handsfree

When the phone rings:



Press the **HANDSFREE** button.  
The call is transferred to the loudspeaker.

### To switch to handsfree during a call

During a call you can switch to handsfree mode:



Press the **HANDSFREE** button.  
The call is transferred to the loudspeaker.



Press the **GREEN PHONE** button to switch back to using the handset.

#### Note

*If you need to replace the handset in the base station during a call, for example, because the battery is flat, hold down the **HANDSFREE** button.*

## Using the directory

You can store up to 50 names and numbers in the telephone directory. You can enter up to 32 digits and up to 16 characters.

### To store an entry in the directory



Press the **DIRECTORY** button.

**MENU**

Press the **MENU** options button. Display shows **New Entry**.

**OK**

Press the **OK** options button.



Enter the telephone number.

**OK**

Press the **OK** options button to enter the name.



Enter the name.

*Entering names:*

Enter the name using the letters on the keypad. For example, to enter the name **TOM**:



Press the **8** button, **T** appears on the display.



Press the **6** button three times until the display shows **0**.



Then press the **6** button to display **m**.

For the full character map, see page 17.

**MENU**

Press the **MENU** options button. Display shows **Save Entry**.

**OK**


Press the **OK** options button to confirm.




Press the **RED PHONE** button until you reach the idle display.

**Note**

*The first letter of each name, and the first letter after a punctuation mark are automatically shown as capitals. Letters are always added to the left of the cursor.*

 Press to switch between capitals and lower case.

 Press to move the cursor.

 Press to delete from right to left.

 





 
 

 
 
 
 Press 1 to enter a blank space.

**Helpline**

*If you experience any difficulties with your BT Diverse 5250, please call the BT Diverse Helpline on 08457 908 070.*

**Character map**

These are the characters you can use when storing a directory entry.

Press	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x	14x
	□	1	€	£	\$	¥	□							
	a	b	c	2	ä	á	à	â	ã	ç				
	d	e	f	3	ë	é	è	ê						
	g	h	i	4	ï	í	ì	î						
	j	k	l	5										
	m	n	o	6	ö	ñ	ó	ò	ô	õ				
	p	q	r	s	7	ß								
	t	u	v	8	ü	ú	ù	û						
	w	x	y	z	9	ÿ	ý	æ	ø	å				
	a→A	*	/	( )	<	=	>	%						
	.	,	?	!	0	+	-	:	¿	¡	“	’	;	-
	#	@	\	&	§									

### To dial a name and number in the directory



Press the **DIRECTORY** button.



Press the **DOWN** navigation button to scroll through the names which are listed in alphabetical order.

*Or*



Enter the first letter of the name you want, e.g. for Emma, press **3** *twice* to search for names beginning with E.



Press the **GREEN PHONE** button. The number is dialled.

### To view directory entry



Press the **DIRECTORY** button.



Press the **DOWN** navigation button to scroll through the entries.

*Or*



Press the first letter of the name you are looking for.



Press the **RED PHONE** button until you reach the idle display.

### To edit a directory entry



Press the **DIRECTORY** button.



Use the keypad to enter the first letter of the name you wish to edit.



Then press the **DOWN** navigation button to scroll to the exact entry you want.

**MENU**

Press **MENU** options button.



Press the **DOWN** navigation button until Edit Entry is displayed.

**OK**

Press the **OK** options button.



**←C**

Edit the number, if necessary, using the **LEFT/RIGHT** and **DELETE** buttons.

**OK**

Press the **OK** button. <NAME> is displayed.

**MENU**

If the name is correct, press the **MENU** button, Save Entry is displayed.

**OK**

Press the **OK** button. The display will show Entry Saved.

*Or*

If you wish to edit the name, enter a new name now, using the **LEFT/RIGHT** and **DELETE** buttons.



**←C**

**MENU**

Press the **MENU** button. The display will show Save Entry.

**OK**

Press the **OK** button. The display will show Entry Saved.

### To delete an entry



Press the **DIRECTORY** button and open the directory.



Press the **DOWN** navigation button to scroll to the entry you want to delete.

**MENU**

Press the **MENU** options button.



Press the **DOWN** navigation button until the display shows **Delete Entry**.

**OK**

Press the **OK** options button to confirm. You hear a confirmation beep.



Press the **RED PHONE** button until you reach the idle display.

### To delete the entire directory



Press the **DIRECTORY** button and open the directory.

**MENU**

Press the **MENU** options button.



Press the **DOWN** navigation button until the display shows **Delete List**.

**OK**

Press the **OK** options button. **Delete List?** is displayed.

**OK**

Press the **OK** options button.



Press the **RED PHONE** button until you reach the idle display.

### Extra directory

This is an additional directory where you are able to store up to 10 names and numbers.

### To store names and numbers in the Extra directory



Press the **EXTRA DIRECTORY** button.

**MENU**

Press the **MENU** button.

The structure for this directory menu is the same as the main name and number directory.

You can follow the instructions starting on page 16 for storing, dialling, editing and deleting numbers in this directory.

#### Note

*This Extra directory does not 'name and number match' when used with Caller Display.*

### Redial

Your handset automatically saves the last 10 telephone numbers dialled into a redial list.

### To dial a number in the redial list



Press the **REDIAL** options button. The last number dialled will be displayed.







Press the **DOWN** navigation button to scroll through the redial list.



Press the **GREEN PHONE** button to dial the number.





### To copy numbers shown in the redial list to the directory

-  Press the **REDIAL** options button.
-  Press the **DOWN** navigation button to scroll to the number you want to copy.
- MENU** Press the **MENU** options button.
-  Press the **DOWN** navigation button until the display shows **COPY to Directory**.
- OK** Press the **OK** options button.
- OK** Press the **OK** options button again.
- Enter the name (for details, see page 16).
- MENU** Press the **MENU** options button. The display shows **Save Entry**.
- OK** Press the **OK** options button to confirm.
-  Press the **RED PHONE** button until you reach the idle display.

#### Note

*To cancel any procedure, press the **RED PHONE** button until the display returns to idle.*


### To delete a number from the redial list

-  Press the **REDIAL** options button.
-  Press the **DOWN** navigation button to select the number for deletion.
- MENU** Press the **MENU** options button.
-  Press the **DOWN** navigation button until the display shows **Delete Entry**.
- OK** Press **OK** to confirm deletion.
-  Press the **RED PHONE** button until you reach the idle display.

### Secrecy

When on a call you can talk to someone in the same room, without your caller hearing.

### To switch secrecy on/off

- During a call:*
- INT** Press the **INT** options button. The microphone is switched off. The caller hears musical tones.
  -  Press the **RED PHONE** button to return to the caller.

## Paging and internal calls

You can alert handset users that they are wanted, or locate a missing handset.

If you have multiple handsets registered to the base you can make internal calls between handsets.

**INT** Press the **INT** options button.

A list of all the handsets that are registered to the base are listed, you can select any of them.

Your handset is identified by INT 1 <.



Press the **DOWN** navigation button to highlight the handset you want to call and press the **GREEN PHONE** button.



*Or*



Press the handset number you want to call on the keypad.

*Or*

**Call All**

Select the **Call All** option to page all the handsets registered to the base and press the **GREEN PHONE** button.



*The line will be seized by the first handset user to answer the call.*

### Note

*You can also page all handsets by pressing the **PAGE** button on the base station.*

## To transfer an external call between handsets

You can forward an external call to another handset registered to the base.

*During an external call:*

**INT**

Press the **INT** options button to display the list of handsets. Your caller hears musical tones.



Press the **UP** or **DOWN** navigation button to select the handset you want to call or **Call all handsets**.



Press the **GREEN PHONE** options button to call. When the other handset answers you can tell them you are transferring the call.



Press the **RED PHONE** button to put the call through.

### Note


*You can also put the call through without announcing it by immediately pressing the **RED PHONE** button after dialling the other handset.*

### To put an external call on hold while you make an internal call

This enables you to ask another handset user a question and then get straight back to your caller.

*During a call:*

**INT** Press the **INT** options button to display the list of handsets. Your caller hears musical tones.

 Press the **UP** or **DOWN** navigation button to select the handset you want to call.

*Or*



Press the handset number you want to call on the keypad.



Press the **GREEN PHONE** button to call.

You can now speak with the other handset user.

*To return to your external caller:*

**MENU** Press the **MENU** button and **Back** will be displayed.

**OK** Select the **OK** options button which will reconnect you to the external call.


### To answer a waiting call during an internal call

If you are making an internal call and hear the Call Waiting tone you can immediately take the incoming call.

**MENU** Press the **MENU** button.

**OK** To accept Call Waiting, press the **OK** options button.

*Or*

 To reject Call Waiting, press the **DOWN** navigation button.

The display shows **reject Call Waiting**.

**OK** Press the **OK** options button.

#### Note

*If you accept Call Waiting you will automatically terminate your internal call.*



# Caller Display and other BT Calling Features

## IMPORTANT

*To use Caller Display and Call Waiting you must first subscribe to the Services from your Network Provider. For more information on BT's Calling Features call BT free on **0800 800 150**.*

## Note

*Calls that are 'withheld', 'unavailable' or 'international' are not stored in the Calls list, as there is no telephone number sent via the Network.*

If you subscribe to a Caller Display Service you can see who is calling you on your handset display, as well as the date and time of their call (unless the number has been withheld).


If you have stored a name to go with the number in your handset directory, the name will be displayed instead.

Please ensure that you have stored the full telephone number, including the area code, otherwise the name will not match the number stored in the directory.

If the caller has withheld their number, the display will show **WITHHELD**.

If you call from another handset, the display shows the handset number and **INT**.

## Note


*If you have a new call in your Calls list, the  icon will flash on the handset display.*

## Calls list

The Calls list contains the telephone numbers of your last 10 callers.

Whether you take a call or not, the caller's details are stored in the Calls list. You can display, scroll through and dial numbers in the list and copy them into the directory.


If a call is received when the Calls list is full then the oldest entry will be deleted automatically.

The  button lets you open:

- Calls list.
- Text messages (SMS).
- Answering machine messages.

*Please refer to the separate Using SMS User Guide for instructions on using the SMS functionality.*

## To view the Calls list

When you have new calls, the  icon flashes in the display.



Press the **ENVELOPE** button.



Press the **DOWN** navigation button until the display shows, e.g. Calls List: 03+07.

In this example, you have received 3 new calls and you have 7 old calls (calls you have already viewed).

**OK**

Press the **OK** options button to display the most recent number that called you.



Press the **UP** or **DOWN** navigation button to display all your new calls, followed by all your old calls.

### Note

*To exit the Calls list at any time, press the **RED PHONE** button until you reach the idle display.*

**WHEN A CALLS LIST ENTRY IS DISPLAYED YOU HAVE THE FOLLOWING OPTIONS:**



### To call the number:

Press the **GREEN PHONE** button. The number displayed is dialled.

### To display the date and time the call was received:

**MENU**

Press the **MENU** options button.



Press the **DOWN** navigation button until the display shows Date and Time.

**OK**

Press the **OK** options button. The date and time of the call are displayed.

**OK**

Press the **OK** options button to return to the Calls list.

### To display the status of the call:

**MENU**

Press the **MENU** options button.



Press the **DOWN** navigation button until the display shows Status.

**OK**



Press the **OK** options button.

The display shows whether the call is a New Call or an Old Call and the number of the call in the Calls list, e.g. 01/10 – the first call in a list of ten.

**OK**

Press the **OK** options button to return to the Calls list.

***To copy a number from the Calls list to the directory:***



- MENU** Press the **MENU** options button.
-  Press the **DOWN** navigation button until the display shows Copy to Directory.
- OK** Press the **OK** options button.  
The number is displayed.
- OK** Press the **OK** options button.  
The display shows <Enter Name>.
-  Enter the name of the person using the keypad.

- MENU** Press the **MENU** options button.  
The display shows Save Entry.
- OK** Press the **OK** options button.  
Entry Saved is displayed.  
The display automatically returns to show the Calls list.

***To delete a call from the Calls list:***

- MENU** Press the **MENU** options button.  
The display shows Delete Entry.
- OK** Press the **OK** options button.  
The display shows Entry has been deleted!  
The display then shows the next Calls list entry.

***To delete the whole Calls list:***

- MENU** Press the **MENU** options button.
-  Press the **DOWN** navigation button until the display shows Delete List.
- OK** Press the **OK** options button.  
The display shows Calls list empty!
-  Press the **RED PHONE** button until you reach the idle display.

## Call Waiting

If you also subscribe to a Call Waiting Service, when you are on a call and another person tries to call you, the second caller's number will appear on the handset display and you will hear an intermittent beep through the handset. This is to alert you to the other caller waiting to speak to you.

### To accept a waiting call

*During a call when you hear the Call Waiting beeps:*

The number (or name if stored in the directory) of the second caller will flash on the display.

- MENU** Press the **MENU** options button.
- Display shows **Accept Call Waiting**.
- OK** Press the **OK** options button.
- ↑↓** Press the **UP** or **DOWN** navigation buttons to toggle between callers.

## Other BT Calling Features

Your BT Diverse 5250 handset helps you use your Network's special services. For full details ask your Network provider.


### Options before you make a call

Before making a call you can:

- Withhold your number from being sent for one call.
- Switch Call Waiting on/off.
- Switch off Ring Back.
- Divert all calls to another number (must be subscribed to).

### To withhold your number from being sent

Your number appears on the display of the person you call. You can withhold it from the next call.

- MENU** Press the **MENU** options button.
- ↓** Press the **DOWN** navigation button until the display shows **Select Services**.
- OK** Press the **OK** options button. The display shows **Withhold Number**.
- OK** Press the **OK** options button.
-  Enter the telephone number you want to call.
- OK** Press the **OK** options button to dial.
- The number is dialled and your number is withheld for this call.

## To switch Call Waiting on/off

You can choose whether to have your Call Waiting service switched on or off depending on what you are doing i.e. if you are using the Internet via your PC and do not want Call Waiting to interrupt you.

**MENU** Press the **MENU** options button.

↓ Press the **DOWN** navigation button until the display shows **Select Services**.

**OK** Press the **OK** options button.

↓ Press the **DOWN** navigation button until the display shows **For All Calls**.

**OK** Press the **OK** options button.

↓ Press the **DOWN** navigation button until display shows **Call Waiting**.

**OK** Press the **OK** options button.

↓ Press the **DOWN** navigation button to choose between **On** or **Off**.

**OK** Press the **OK** options button.

 Press the **RED PHONE** button until you reach the idle display.

## Ring Back Off

If you make a call and the number is engaged you can set your telephone to ring you back once the number is free by pressing **5**. If you want to cancel this request i.e. if you have to go out before the call rings back.

**5** JKL

**MENU** Press the **MENU** button.

Display shows **Select Services**.

**OK** Press the **OK** options button.

↓ Press the **DOWN** navigation button until **Cancel Ringsback** is displayed.

You will hear a Network message confirming your request.

**OK** Press the **OK** options button.

 Press the **RED PHONE** button until you reach the idle display.

## To set Call Divert

### Note

*Call Divert requires subscription from your Network provider. You may be charged a subscription fee.*

You can divert all incoming calls to another number where you can be reached.

*You can divert calls:*

- **All calls** – calls are put straight through to the number you have set.
- **No answer** – calls are forwarded if your phone is not answered.
- **When busy** – calls are forwarded if your phone is engaged.

**MENU** Press the **MENU** options button.

**↓** Press the **DOWN** navigation button until the display shows **Select Services** highlighted.

**OK** Press the **OK** options button.

**↓** Press the **DOWN** navigation button until the display shows **For All Calls**.

**OK** Press the **OK** options button.  
Display shows **Call Divert**.

**OK** Press the **OK** options button again.



Press the **UP** or **DOWN** navigation button to display the option you want **All Calls**, **No Answer** or **When Busy**.

**OK**

Press the **OK** options button again.



Select **On** or **Off**.

**OK**

Press the **OK** options button.

Enter the telephone number you want your calls diverted to.

**OK**

Press the **OK** options button.

You will hear a Network message confirming your divert request.



Press the **RED PHONE** button until you reach the idle display.

### Helpline

*If you experience any difficulties with your BT Diverse 5250, please call the BT Diverse Helpline on **08457 908 070**.*

# Additional features

## Voice Mail

If you have Call Minder or a Network Messaging Service on your telephone line you can set the **1 button** to access your messages.

### To set one-touch access to your messages

**MENU** Press the **MENU** options button.

**↓** Press the **DOWN** navigation button until the display shows Voice Mail.

**OK** Press the **OK** options button.

**↓** The display shows Set Key 1.


**OK** Press the **OK** options button.

**↓** Press the **DOWN** navigation button to select either Network Mailbox or Answering Machine option.

**OK** Press the **OK** options button.

*If you selected Answering Machine: Press **OK**.*

**OK** If you selected Network Mailbox:

 Enter the telephone number of your messaging service. For example, **1571** to access 'BT Answer' voice mail service.

**OK** Press the **OK** options button. Display shows Entry Saved.



Press the **RED PHONE** button until you reach the idle display.

### To set up quick access to your Voice Mail service when behind a switchboard e.g. Meridian Mail

Follow the steps previously given, but when you come to enter the telephone number of your messaging service, you will need to follow the example below:



Enter the access number for your messaging service.

e.g. 7000



Press and hold the **RECALL** button until P is displayed to enter a pause in the dialling sequence.



Enter your extension number, followed by a hash e.g. 1234#.



Press and hold the **RECALL** button until P is displayed to enter a another pause in the dialling sequence.



Enter your PIN followed by a hash e.g. 000000 #.



The entire number should look like this:

7000P1234#P0000000#

**OK**

Press the **OK** options button.



Press the **RED PHONE** button until you reach the idle display.

### Note

*If you store your security PIN as part of the quick access number, anyone with access to the handset will be able to retrieve your messages.*

### To retrieve messages from your Voice Mail service



Press and *hold down* the **1** button.

When set up it will take you into your message service. If during the set up you entered your security PIN as well as the telephone number you will be taken quickly into your messages. If the security PIN was not included you will have to enter this number now followed by a hash.



You will be taken into your messages.



Press the **RED PHONE** button until you reach the idle display.

### To change the quick access button setting

**MENU** Press the **MENU** options button.



Press the **Down** button until the display shows Voice Mail.

**OK**

Press the **OK** options button.

The display shows Set Key 1.

**OK**

Press the **OK** options button.

The display shows Answer Machine.

A ✓ shows this setting has been selected.

*To change this setting to Network Mailbox:*



Press the **UP** button.

The display shows Network Mailbox.

**OK**

Press the **OK** options button.

The display shows  
<Enter Number>



Enter the telephone number of your messaging service. For example, **1571** to access 'BT Answer' voice mail service.

**OK**

Press the **OK** options button

The display shows Entry Saved.



Press *and hold* the **RED PHONE** button to return to the idle screen.



# Handset settings

You can choose a range of settings to suit your personal preferences.

## To change the earpiece volume and handsfree volume

*You can choose from:*

- 3 earpiece volume levels
- 5 handsfree loudspeaker volume levels.

**MENU** Press the **MENU** options button.

**↓** Press the **DOWN** navigation button until the display shows Audio Settings.

**OK** Press the **OK** options button.  
The display shows Earpiece Volume.

**OK** Press the **OK** options button.  
You hear the current handsfree volume.

**← →** Press the **LEFT** or **RIGHT** navigation button to set the volume level you want.

**OK** Press the **OK** options button.

**↓** Press the **DOWN** navigation button to select the handsfree volume.

**OK** Press the **OK** options button.  
You hear the current handsfree volume.



Press the **LEFT** or **RIGHT** navigation button to set the volume level you want.

**OK**

Press the **OK** options button to confirm and save the settings.



Press the **RED PHONE** button until you reach the idle display.

## To set the ringer volume and melody

*You can choose from:*

- 5 ringer volumes (original setting = 3)
- Crescendo ring (increasing volume)
- Ringer off
- 10 ringer melodies

**MENU** Press the **MENU** options button.



Press the **DOWN** navigation button until the display shows Audio Settings.

**OK**

Press the **OK** options button.



Press the **DOWN** navigation button until the display shows Ringer Volume.

**OK**

Press the **OK** options button.  
You hear the current ringer volume.



Press the **LEFT** or **RIGHT** navigation button to set the ringer level you want.

**OK** Press the **OK** options button.



Press the **DOWN** navigation button to select the ringer melody.

**OK** Press the **OK** options button.  
*Select whether external calls or internal calls:*

**OK** Press the **OK** options button.



Press the **UP** or **DOWN** navigation button to set the ringer melody you want. The melody is played and its number shown.

**OK** Press the **OK** options button to confirm and save the settings.

A ✓ is displayed next to the Set melody.



Press the **RED PHONE** button until you reach the idle display.

### To change the display language

**MENU** Press the **MENU** options button.



Press the **DOWN** navigation button until the display shows Handset Settings.

**OK** Press the **OK** options button.



Press the **DOWN** navigation button until the display shows Language.

**OK** Press the **OK** options button.



 


Press the **DOWN** navigation button to display the language you want.

**OK** Press the **OK** options button to confirm.



Press the **RED PHONE** button until you reach the idle display.

### Shortcut button

*If you want to switch the handset ringer off quickly you can also press and hold the  button. The  icon is displayed. To turn the handset ringer back on press and hold down the  button again and the symbol will disappear.*

## To switch off your handset's beeps and tones

*You can switch off and on:*

- Key beeps when you press each button on your handset
- Confirmation beeps when you have finished making a setting or action on your handset.
- Battery Low warning beep. You can also set this to sound only during a call.

**MENU** Press the **MENU** options button.



Press the **DOWN** navigation button until the display shows Audio Settings.

**OK**

Press the **OK** options button.



Press the **DOWN** navigation button until the display shows Advisory Tones.

**OK**

Press the **OK** options button.

**OK**

Press the **OK** navigation button to switch the key tones On or Off.



Press the **DOWN** navigation button to move to the next line.

**OK**

Press the **OK** options button.



Press the **UP** or **DOWN** navigation button to switch the battery low beep On or Off or to sound only during a call.

**OK**

Press the **OK** options button to confirm the settings.



Press the **RED PHONE** button until you reach the idle display.

## To switch auto talk on or off

When you receive a call, you can answer it simply by lifting the handset off the base station. This is called auto-talk. When you switch auto-talk off, you answer all calls by pressing the **GREEN PHONE** button.



**MENU**

Press the **MENU** options button.



Press the **DOWN** navigation button until the display shows Handset Settings.

**OK**

Press the **OK** options button.

The display shows Auto Answer.

**OK**

Press the **OK** options button. A ✓ indicates auto talk is switched on. Press the **OK** options button again to switch auto-talk off.



Press the **RED PHONE** button until you reach the idle display.

### To reset a handset

You can restore a handset to its factory settings.

The handset's registration, the Directory and the Calls list are not affected.

**MENU** Press the **MENU** options button.

**↓** Press the **DOWN** navigation button until the display shows Handset Settings.

**OK** Press the **OK** options button.

**↓** Press the **DOWN** navigation button until the display shows Reset Handset.

**OK** Press the **OK** options button.

The display shows *reset to default?*

**OK** Press the **OK** options button to confirm reset.

*The settings after a reset will be:*

Ringer volume	<b>3</b>
Ringer melody	<b>1</b>
Auto talk	<b>On</b>
Battery low beep	<b>On</b>
Room monitor level	<b>off</b>
Room monitor level	<b>high</b>
Time control	<b>off</b>
Display language	<b>English</b>
Redial list	<b>deleted</b>



Press the **RED PHONE** button until you reach the idle display.

### To switch keyguard on and off

You can lock the keypad so that it cannot be used accidentally while carrying it around.



Press and hold the **#** button. When the keyguard is switched on, the display will show the icon.



Press and hold the **#** button to switch the keyguard off.

### To give a handset a name rather than a number

The handsets when registered are assigned numbers e.g. INT 1. You can give the handset a name instead of a number to match the user or location, e.g. Anne or Office. The name can be up to 10 characters long.

**INT**

Press the **INT** options button then to enter the internal call menu.



Press the **UP** or **DOWN** navigation button to select the handset you want to change the name or number of.



Press the **DOWN** navigation button to display *Change Handset Name*.

**OK**

Press the **OK** options button.

**<C**

Press the **<C** options button to delete the old name.



Enter the name you want (*see page 16*).

**OK**

Press the **OK** options button to confirm.



Press the **RED PHONE** button until you reach the idle display.

### Note

*This name will appear in the internal list of handsets.*

### To change the internal number of a handset

Your handsets are automatically assigned internal numbers between 1-6. You can change these numbers.

**INT**

Press the **INT** options button to display the list of handsets.



Press the **UP** or **DOWN** navigation button to select the handset you want.

**MENU**

Press the **MENU** options button.

Edit Handset No. is displayed.

**OK**

Press the **OK** options button.



Enter an available number.  
If the number is already assigned to another handset you hear a beep. Select another number.



If required, press the **UP** or **DOWN** navigation button to select another handset and use the Keypad to change the number.

**OK**

Press the **OK** options button to confirm.



Press the **RED PHONE** button until you reach the idle display.

### Helpline

*If you experience any difficulties with your BT Diverse 5250, please call the BT Diverse Helpline on 08457 908 070.*

# Base station settings

## Base station audio settings

Using the audio settings menu you can change the following settings on your base station: loudspeaker volume, ringer volume, ringer melody and key tones.

### To change the loudspeaker volume




- MENU** Press the **MENU** options button.
- ↓** Press the **DOWN** navigation button until the display shows Base Settings.
- OK** Press the **OK** options button.  
The display shows Audio Settings.
- OK** Press the **OK** options button.  
The display shows Loudspeaker Volume.
- OK** Press the **OK** options button.
- ←** Press the **LEFT** navigations button to decrease the loudspeaker volume.
- Press the **RIGHT** navigations button to increase the loudspeaker volume.

- OK** Press the **OK** options button.  
The display show Entry Saved.





### To change the ringer volume

- MENU** Press the **MENU** options button.
- ↓** Press the **DOWN** navigation button until the display shows Base Settings.
- OK** Press the **OK** options button.  
The display shows Audio Settings.
- OK** Press the **OK** options button.
- ↓** Press the **DOWN** navigations button until the display shows Ringer Volume.
- OK** Press the **OK** options button.
- ←** Press the **LEFT** navigations button to decrease the ringer volume.
- Press the **RIGHT** navigations button to increase the ringer volume.
- OK** Press the **OK** options button.  
The display show Entry Saved.

### To change the ringer melody

- MENU** Press the **MENU** options button.
-  Press the **DOWN** navigation button until the display shows Base Settings.
- OK** Press the **OK** options button.  
The display shows Audio Settings.
- OK** Press the **OK** options button.  
Press the **DOWN** navigation button until the display shows Ringer Melody.
- OK** Press the **OK** options button.  
Press the **UP** or **DOWN** options buttons to select the preferred ringer melody, from a choice of 10 melodies.  
Each melody is played as it is displayed.
- OK** Press the **OK** options button.  
A  shows the selected ringer melody.
-  Press the **RED PHONE** button until you reach the idle display.

### To turn the base key tones on or off

- MENU** Press the **MENU** options button.
-  Press the **DOWN** navigation button until the display shows Base Settings.
- OK** Press the **OK** options button.  
The display shows Audio Settings.
- OK** Press the **OK** options button.
-  Press the **DOWN** navigation button until the display shows Key Tones.
- OK** Press the **OK** options button to select key tones **ON** or key tones **OFF**. A  shows the selected option.
-  Press the **RED PHONE** button until you reach the idle display.


### Base Station PIN (Personal Identification Number)

Your base station PIN has a default setting of 0000 but you may want to change this to prevent unauthorised use of the handset(s).


If you change your PIN keep a record of the new number by writing it in the space provided on *page 8*.

### To change the base station PIN


**MENU** Press the **MENU** options button.

 Press the **DOWN** navigation button until the display shows Base Settings.


**OK** Press the **OK** options button.

 Press the **DOWN** navigation button until the display shows System PIN.

**OK** Press the **OK** options button.

 Enter the current PIN (original setting = 0000).

**OK** Press the **OK** options button.

 Enter the new PIN.

**OK** Press the **OK** options button.

 Repeat the new PIN to confirm.

**OK** Press the **OK** options button to save the new PIN.

 Press the **RED PHONE** button until you reach the idle display.

### To reset the base

You can restore a base station to its factory settings. Resetting the base will not affect the system PIN or handset registration.

**MENU** Press the **MENU** options button.



Press the **DOWN** navigation button until the display shows Base Settings.

**OK** Press the **OK** options button.



Press the **DOWN** navigation button until the display shows Base Reset.

**OK** Press the **OK** options button.



Enter the current PIN (original setting = 0000.)

**OK** Press the **OK** options button.

Display shows reset to default?

**OK** Press the **OK** options button to confirm reset.


*The settings after a reset will be:*

Calls list	<b>deleted</b>
Dialling mode	<b>tone</b>
Flash time	<b>100ms</b>
Prefix	<b>deleted</b>
Pause after prefix	<b>3secs</b>
SMS provider number	<b>Pre-set number switched on</b>
SMS incoming and outgoing lists	<b>deleted</b>
Voice dialling	<b>deleted</b>



Press the **RED PHONE** button until you reach the idle display.

#### Note

The  icon beside Repeater mode shows that it is ON.



## To set repeater mode

You can extend the range of your base station by purchasing a BT Diverse repeater. This boosts the signal and allows you to use your handset further away from the base station. If you want to use a BT Diverse repeater, you must switch this mode on.

**MENU** Press the **MENU** options button.

↓ Press the **DOWN** navigation button until the display shows *Base Settings*.

**OK** Press the **OK** options button.

↓ Press the **DOWN** navigation button until the display shows *Additional Features*.

**OK** Press the **OK** options button.

↓ Press the **DOWN** navigation button until the display shows *Repeater Mode*.

**OK** Press the **OK** options button.

The display shows *Change repeater settings*.

**OK** Press the **OK** options button.

The message states *"Please wait"*. The phone will return to the main idle screen automatically.

# Setting up and personalising your answering machine

You can operate your BT Diverse 5250 answering machine from:

- The base unit
- The handset
- Remotely from any external *Touchtone*™ telephone.

The factory setting for the answering machine is ON, so you can use it as soon as you have charged up your BT Diverse 5250. Your callers will be greeted with a pre-recorded outgoing message *'Hello, your call cannot be taken at the moment, so please leave your message after the tone'*.

You will need to set the date and time (if you have not already done so) so that you will know when each message was received. You can set the date and time manually (*see page 13*) or if you have subscribed to your network's Caller Display service, the date and time will be set automatically as soon as you receive your first call.

## Outgoing messages

The outgoing message is the greeting a caller first hears when the answering machine picks up their call. Your BT Diverse 5250 gives you a choice of 2 outgoing messages, one for 'Answer and Record mode' and one for 'Answer Only mode':

### Answer and Record

The pre-recorded outgoing message for Answer and Record mode is:

*"Hello, your call cannot be taken at the moment, so please leave your message after the tone".*

If you wish, you can record your own outgoing message. See *'To record your own outgoing message'*, on page 41.

When the answering machine takes a call, your BT Diverse 5250 will play your Answer and Record message and then your caller can leave a message.

## Answer Only

There is no pre-recorded message for Answer Only so you will need to record your own, remembering to tell your caller that they will not be able to leave a message. See *'To record your own outgoing message'*, opposite.

When the answering machine takes a call, your BT Diverse 5250 will play your Answer Only message but *will not allow your caller to leave a message.*

## To record your own outgoing message

### Note

*The minimum outgoing message length is 4 seconds and the maximum length is 2 minutes and 50 seconds.*

*If you record a message of less than 4 seconds, the display shows Recording too short!  
If you pause during recording for longer than 2 seconds recording is stopped.*

- MENU** Press the **MENU** options button.
- ↓ Press the **Down** button until the display shows Voice Mail.
- OK** Press the **OK** options button.
- ↓ Press the **DOWN** button until the display shows Announcements.
- OK** Press the **OK** options button.
- The display shows  
Record Announcement.
- If you want to record a message for Answer and Record:*
- OK** Press the **OK** options button.  
*Or*

*If you want to record a message for Answer Only:*

**↓** Press the **DOWN** button until the display shows Record Announce Only and then press the **OK** options button.

The display shows  
Press "OK" Speak after tone.


**OK** Press the **OK** options button to confirm you are ready to record your message.

After you hear the short beep, speak your outgoing message clearly into the handset.

**OK** To stop recording press the **OK** options button.

The display shows Recording saved, you hear a confirmation tone and your message is played back to you.

#### Note

*To cancel recording at any time, press the  button.*

*If you cancel while recording: In Answer and Record mode – the display will show Announcement deleted! and the pre-recorded outgoing message will be used again.*

*In Answer Only mode – the display will show Announce only not available!*



Press *and hold* the **RED PHONE** button to return to the idle screen.

### To play your outgoing message

**MENU** Press the **MENU** options button.

**↓** Press the **Down** button until the display shows Voice Mail.

**OK** Press the **OK** options button.

**↓** Press the **DOWN** button until the display shows Announcements.

**OK** Press the **OK** options button.

**↓** Press the **DOWN** button until the display shows Play Announcement, to play your Answer and Record message.

*Or*

**↓** Press the **DOWN** button *again* to display Play Announce Only to play the Answer Only message.

**OK** Press the **OK** options button.

You will hear your outgoing message via the loudspeaker.

#### Note

*If you have not recorded an Answer Only outgoing message the display will show Announce only not available!*



Press *and hold* the **RED PHONE** button to return to the idle screen.

### To select the outgoing message your callers will hear

**MENU** Press the **MENU** options button.

↓ Press the **Down** button until the display shows Voice Mail.

**OK** Press the **OK** options button.

↓ Press the **DOWN** button until the display shows Announcements.

**OK** Press the **OK** options button.

↓ Press the **DOWN** button until the display shows Set Answer Mode.

**OK** Press the **OK** options button.  
The display shows Answer and Record.

*To select Answer and Record:*

**OK** Press the **OK** options button,  
A ✓ shows Answer and Record mode is selected.

*Or*

*To select Answer Only:*

↓ Press the **DOWN** button *again* to display Announce Only.

**OK** Press the **OK** options button.  
A ✓ shows Answer Only mode is selected.

### Note

*If you have not recorded an Answer Only outgoing message the display will show Announce only not available!*



Press *and hold* the **RED PHONE** button to return to the idle screen.

### To delete your outgoing message

*If you delete your own outgoing message:*

In Answer and Record mode –  
The pre-recorded outgoing message is automatically reinstated.

In Answer Only mode –  
The answering machine switches itself off.

**MENU** Press the **MENU** options button.

↓ Press the **Down** button until the display shows Voice Mail.

**OK** Press the **OK** options button.

↓ Press the **DOWN** button until the display shows Announcements.

**OK** Press the **OK** options button.

↓ Press the **DOWN** button until the display shows Delete Announcement.

*If you want to delete the Answer and Record Message:*

**OK** Press the **OK** options button.

*Or*

*If you want to delete the Answer Only message:*

**↓** Press the **DOWN** button *again* to display  
Delete Announce Only.

**OK** Then, press the **OK** options button.

The display shows  
Delete Are you sure?

**OK** Press the **OK** options button to confirm.

The display shows  
Announcement deleted!



Press *and hold* the **RED PHONE** button to return to the idle screen.

## Answer Delay

Answer delay sets the number of times your BT Diverse 5250 will ring before the answering machine picks up a call and starts playing the outgoing message.


You can choose for the answering machine to pick up immediately, after 10 seconds, after 20 seconds (pre-set setting) or after 30 seconds. You can also select 'Auto' which is the Time Saver setting.

Time Saver can save you the cost of a call when you want to ring in to find out if you have new messages.

- If your answering machine answers after 10 seconds, you have new messages.
- If it answers after 20 seconds, you do not have new messages.

So if you wait for approx. 15 seconds, you can end the call without the cost of being connected, knowing you have no new messages.


## To change the answer delay setting

- MENU** Press the **MENU** options button.
- ↓** Press the **DOWN** button until the display shows Voice Mail.
- OK** Press the **OK** options button.
- ↓** Press the **DOWN** button until the display shows Ring Delay.
- OK** Press the **OK** options button.
- ↑↓** Press the **UP** or **DOWN** button to select the setting you want – Immediately, 10 sec, 20 sec, 30 sec or Auto.
- OK** Press the **OK** options button to confirm.
- A ✓ is shown next to the selected answer delay setting.
-  Press *and hold* the **RED PHONE** button to return to the idle screen.

## Setting the message length

You can specify the time limit your callers have to leave a message. The choices are 30 seconds, 60 seconds, 120 seconds (this is the factory setting) or Maximum (remaining record time).

## To adjust the message length

- MENU** Press the **MENU** options button.
- ↓** Press the **DOWN** button until the display shows Voice Mail.
- OK** Press the **OK** options button.
- ↓** Press the **DOWN** button until the display shows Records.
- OK** Press the **OK** options button.
- The display shows Message Length.
- OK** Press the **OK** options button.
- ↑↓** Press the **UP** or **DOWN** button to select the required message length – Maximum, 30 sec, 60 sec or 120 sec.
- OK** Press the **OK** options button to confirm.
- A ✓ is shown next to the selected message length.
-  Press *and hold* the **RED PHONE** button to return to the idle screen.

## Call screening

From your base station or handset, you can listen in to a caller leaving their message. This feature can be switched on or off on either the handset or on the base station. The factory setting is on.

### To use call screening

- MENU** Press the **MENU** options button.
- ↓ Press the **Down** button until the display shows *Voice Mail*.
- OK** Press the **OK** options button.
- ↓ Press the **DOWN** button until the display shows *Call Screening*.
- OK** Press the **OK** options button. The display shows *Handset*.
- To switch the Handset Loudspeaker ON or OFF:*
- OK** Press the **OK** options button.
- A ✓ shows when call screening is set to ON.
- To switch the Base Loudspeaker ON or OFF:*
- ↓ Press the **Down** button until the display shows *Base*.
- OK** Press the **OK** options button.
- A ✓ shows when call screening is set to ON.



Press *and hold* the **RED PHONE** button to return to the idle screen.

### Note

*During a call you can switch off call screening by pressing the **RED PHONE** button.*

## Quick access button setting

Your BT Diverse 5250 comes preset so that you can quickly access your answering machine messages by pressing the **ENVELOPE** button.

If you have Call Minder or a Network Messaging Service set up on your BT Diverse 5250 you may want to change this setting, so that when you press the **ENVELOPE** button you have quick access to your mailbox, instead of to the built-in answering machine. For more information on Voice Mail, *see page 29*.




# Using the BT Diverse 5250 answering machine via the base unit

## Note

*If the answering machine is being operated from the handset or it is recording a message, it **cannot** be operated from the base at the same time.*

You can operate and use the main answering machine functions via the buttons on the base, when the handset is in standby mode.

For more advanced functions you will need to refer to the instructions in the section 'Using the BT Diverse 5250 answering machine via the handset'.

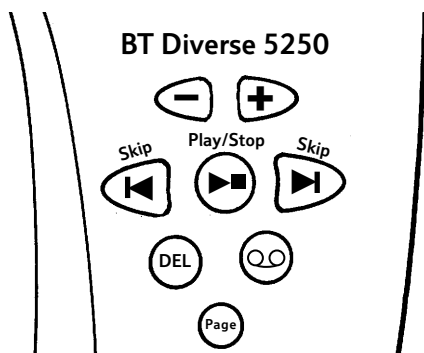


## To switch the answering machine on and off



 
Press the **ANSWERING MACHINE** button to switch ON or OFF.

*When you switch the answering machine ON:*

The **ANSWERING MACHINE** button lights up and the available recording time is announced.

In idle mode, the handset display shows the  icon.

*When you switch the answering machine OFF:*

The **ANSWERING MACHINE** button light goes out and the  icon disappears from the handset display.

## New message indicator

If you have a new message stored on your answering machine, the **ANSWERING MACHINE** button light on the base will flash to alert you. This will still happen, even when the answering machine is switched off.

## To adjust the loudspeaker volume during playback



Press the – button to decrease the volume.



Press the + button to increase the volume.

## To playback messages



Press the ►■ button.

*During playback:*



Press the ◀ button to repeat the current message.



Press the ◀ button *twice* to skip back to the previous message.



Press the ► button to play the next message.



Press the ► button *twice* to skip forward to the message after next.



Press the ►■ button to stop playback.



Press the **DEL** button to delete the current message.

# Using the BT Diverse 5250 answering machine via the handset

## Note


*If the answering machine is being operated from the base or it is recording a message, it **cannot** be operated from the handset at the same time.*

## To switch the answering machine on and off


- MENU** Press the **MENU** options button.
- ↓** Press the **DOWN** button until the display shows Voice Mail.
- OK** Press the **OK** options button.
- ↓** Press the **DOWN** button until the display shows Answer Machine.
- OK** Press the **OK** options button.
- The display will show a ✓ when the answering machine is set to ON.

*When you switch the answering machine ON:*

The **ANSWERING MACHINE** button lights up and the available recording time is announced.

In idle mode, the display shows the  icon.

*When you switch the answering machine OFF:*

The **ANSWERING MACHINE** button goes out and the  icon disappears from the display.

## To interrupt a call

If a caller is leaving a message, you can interrupt and take the call at the handset.

*While the caller is leaving their message:*




Press the **GREEN PHONE** button. The machine stops recording and you can talk to your caller.

**Note**

*If 2 or more seconds have already been recorded when you take the call, the call will still be displayed as a new message.*

**New message indicator**

If you have a new message stored on your answering machine, the  icon on the handset display will flash to alert you. This will still happen, even when the answering machine is switched off.

**Playing messages****To listen to your messages**

Press the **ENVELOPE** button.



Press the **DOWN** button until the display shows **e.g.**  
**Answering Mach. 01+04.**

- The first 2 digits (e.g. 01) refer to the number of new messages saved.
- The last 2 digits (e.g. 04) refer to the number of old messages saved.

**OK** Press the **OK** options button.  
Your message(s) will be played back to you over the handset loudspeaker.

Playback begins with the first new message. At the start of each message, the number of the message and the day and time the message was received are announced.

When all new messages have been played, old messages will follow.

If there are no new messages, just the old messages will play back.

At the end of all messages, you hear the end of messages tone.

Once you have played back a message it is classed as an 'old' message.

*Answering machine operation during playback:*

*To pause playback:*

**MENU** Press the **MENU** options button, 'Pause' is announced and the display shows **Continue**.

**OK** Press the **OK** options button to resume playback.

*To change the playback volume:*

**MENU** Press the **MENU** options button, 'Pause' is announced and the display shows **Continue**.



Press the **DOWN** button until the display shows **Volume**.

**OK** Press the **OK** options button.



Press the **LEFT** or **RIGHT** button to decrease or increase the volume.

*To repeat the current message:*



Press the **UP** button.

*To skip back to the previous message:*



Press the **UP** button *twice*.

*To play the next message:*



Press the **DOWN** button.

*To skip forward to the message after next.*



Press the **DOWN** button *twice*.

*To delete the current message.*



Press the **◀C** options button. Message deleted! is displayed and announced.



Press *and hold* the **RED PHONE** button to return to the idle screen.

### Note

*If playback is stopped for more than a minute the answering machine returns to the idle screen.*

### To delete all messages

You can only delete old messages, so you must listen to your messages before you can delete them.

### MENU

Press the **MENU** options button. 'Pause' is announced.



Press the **DOWN** button until the display shows Delete all.

**OK**

Press the **OK** options button.

The display shows Really?

**OK**

Press the **OK** options button.

Deleted is displayed and 'Messages deleted' is announced.



Press *and hold* the **RED PHONE** button to return to the idle screen.

### To copy a telephone number of a message to the directory

*During message playback:*

### MENU

Press the **MENU** options button.

'Pause' is announced.



Press the **DOWN** button until the display shows Copy to Directory.

**OK**

Press the **OK** options button.

The display shows the callers telephone number.

**OK**

Press the **OK** options button.

The display show <Enter Name>.



Enter a name using the keypad.

**MENU** Press the **MENU** options button .

The display shows  
Save Entry.

**OK** Press the **OK** options button.

The display shows Entry  
Saved and you hear a  
confirmation tone.

Playback then resumes  
automatically.

# Remote access

You can operate your answering machine from any external *Touchtone*™ phone by phoning your BT Diverse 5250 and entering your base station PIN.

Using this code prevents other people from accessing your answering machine functions without your permission.

## IMPORTANT

*You must change the base station PIN from the Original setting of 0000 for your remote access to function. See 'To change the base station PIN', page 37/38.*

## To switch on your answering machine from another phone

If you forget to switch your answering machine on, you can do it from another phone.

Dial your telephone number and let the phone ring for approximately 1 minute.

When you hear the announcement *'Please enter PIN'*. Enter the base PIN (must be changed from 0000).

The recording time left will be announced. Any messages are played back to you.



When you end the call, your answering machine will be switched on.

## To access and play your answering machine messages from another phone



Dial your telephone number.

*When you hear your outgoing message:*



Press the **9** button.



Enter your base PIN.

Your machine tells you whether you have any new messages. The messages are now played back.

*To control the answering machine functions during playback:*



To repeat the current message. Press *twice* to skip back to previous message.



To pause/resume playback.



To skip forward to the next message.


Press *twice* to skip to the following message.



To delete the current message.

# Using additional handsets and bases

Up to six handsets can be registered and operated from the BT Diverse 5250 base station. This allows you to make internal calls between two handsets while a third is making an external call.

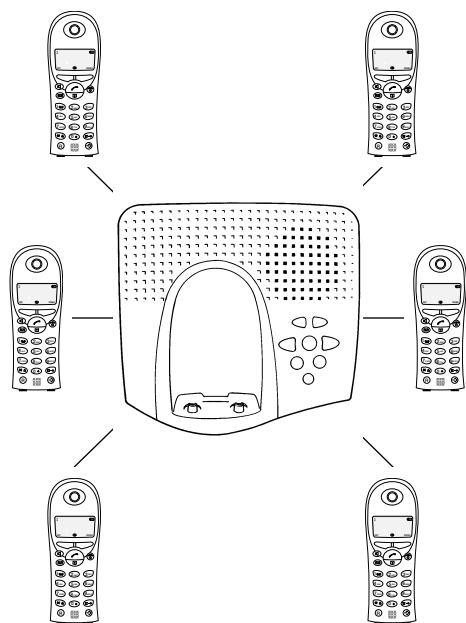

Each handset can be registered on up to four bases.

## Registering additional handsets

If you purchase new handsets to use with your current BT Diverse 5250, they will not be pre-registered to a base station. You will need to do this before you can use them.

### To register a new BT Diverse 5200 handset to a 5250 base station

For this method of registration your handset must be a BT Diverse 5250.

Place your handset in the base station.

Ensure that the handset is switched on.

After about 1 minute, the handset's internal number will be displayed, e.g. INT 2.

The next available internal number (**2-6**) will be automatically assigned to the handset.



**Note**

*If all internal numbers have been assigned then the internal number 6 will be re-assigned.*

*You can change the internal handset number if you wish, see page 35.*

**To manually register a  
BT Diverse 5200 handset to  
another base station**

If you want to register your handset to another base station you will need to manually register it.

*On the handset to be registered:*

**MENU** Press the **MENU** options button.



Press the **DOWN** navigation button until the display shows Handset Settings.

**OK**

Press the **OK** options button.



Press the **DOWN** navigation button until the display shows Register Handset.

**OK**

Press the **OK** options button.



Enter system PIN.

**OK**

Press the **OK** options button.

If the base station is a BT Diverse 5250 or 5250 base press the **PAGE** button for approximately three seconds.

After approximately one minute the handset will display its internal number. The handset is now registered and the handset display will return to the idle screen.

If the base is not a 5250 or 5250 you will need to follow the user guide for the base station you are registering the 5250 handset to.

**Note**

*To make internal calls or page handsets, see page 21.*

### To register BT Diverse 2000/3000/4000 series handsets and other makes

Providing your handset is GAP (Generic Access Profile) compliant, you can register it to your BT Diverse 5250 base.





Place your handset into registration mode according to the instructions in its user guide.

When the handset is in registration mode, you will need to press the **PAGE** button located on the top of your BT Diverse 5250 base station, for approximately three seconds. After a short period of time the handset will be registered. The BT Diverse 5250 will allocate the next available handset number.

#### Note

*To check that the handset has registered successfully to the base, press the **PAGE** button, all handsets will ring.*

### To de-register a handset

- INT** Press the **INT** options button to display the list of internal handsets registered to the base.
-  Press the **UP** or **DOWN** navigation button to select the handset you want to de-register.
- MENU** Press the **MENU** options button.
-  Press the **DOWN** navigation button until the display shows De-register Handset.
- OK** Press the **OK** options button.
-  Enter the base station PIN (original setting = 0000).
- OK** Press the **OK** options button.  
Display shows deregister handset?
- OK** Press the **OK** options button to confirm de-registration.
-  Press the **RED PHONE** button to confirm de-registration.

# Help

## Helpline

*If you experience any difficulties with your BT Diverse 5250, please call the BT Diverse Helpline on **08457 908 070**.*

Try these solutions to the most common problems.

Problem	Possible cause	Solution
Handset not registering.	The base is not powered. There are no batteries in the handset.	Make sure that the power supply is plugged in at the base and switched on. Make sure that the rechargeable batteries (included) are fitted in the handset correctly. Switch the handset off and then back on again, place the handset on to the base again and leave for approx. 1 minute to try registering again. If this is unsuccessful, then try a manual registration (see page 55).
You have forgotten your base station PIN number.	You have changed the PIN.	Try entering the default PIN (0000). If you have changed the PIN and cannot remember the number you will need to contact the BT Diverse Helpline on 08457 908070.
No display.	The handset is switched off.	Hold down <b>RED PHONE</b> for 1 second.  Charge or replace the batteries.
Nothing happens when you press any button.	Keyguard may be switched on.	Hold down the <b>#</b> button for 1 second.
No connection between handset and base station.	Are you out of range of the base station.  Handset is not registered.  Base station is not switched on.	Move closer to the base station.  Register the handset.  Check the mains power is connected correctly.

Handset on the base does not charge.	<p>Is another handset using the line for a long time?</p> <p>Is the handset placed on the base properly?</p> <p>Are the batteries in correctly?</p>	<p>Maximum charging power is only possible when no calls are being made.</p> <p>Make sure that the handset is placed on the base or in the charger correctly. You will hear a confirmation tone.</p> <p>Check that you have put the batteries in the right way, you will hear a confirmation tone.</p>
Handset does not ring.	The handset ringer may be switched off.	Hold down * to switch the ringer back on.
The incoming caller's number is not displayed even though you have Caller Display.	The caller's number has been withheld.	Caller has to allow their number to be sent.
You keep hearing the error beep (a descending tone).	You have pressed the wrong button in a sequence.	Check the prompts in the display or refer to instructions in the user guide.
The answering machine does not record any messages or announcements.	Memory is full.	<p>Delete old messages.</p> <p>Playback and delete new messages.</p>
An answering machine message does not have a time stamp.	The date/time is not set.	Set the date/time, <i>see page 13</i> .
During remote operation you are unable to access messages	You have not changed the base station PIN.	Change the base station PIN to allow you to access messages from another phone.

# General information

## Guarantee

Your BT Diverse 5250 is guaranteed for a period of 12 months from the date of purchase.

Subject to the terms listed below the guarantee will provide for the repair of, or at BT's or its agent's discretion the option to replace the BT Diverse 5250, or any component thereof, (other than batteries), which is identified as faulty or below standard, or as a result of inferior workmanship or materials. Products over 28 days old from the date of purchase may be replaced with a refurbished product.

### The conditions of this guarantee are:

- The guarantee shall only apply to defects that occur within the 12 month guarantee period.
- Proof of purchase is provided.
- The equipment is returned to BT or its agent as instructed.
- This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.
- This guarantee does not affect your statutory rights.

### Within the 12-month guarantee period:

If you experience difficulty using the product, prior to returning your product, please read the Help section beginning on *page 57*, or contact the BT Diverse Helpline on **08457 908070** for assistance.

In the unlikely event of a defect occurring, please follow the Helpline's instructions for replacement or repair.

### Outside the 12-month guarantee period:

If your product needs repair after the guarantee period has ended, the repair must meet the approval requirements for connection to the telephone network. We recommend that you call the Helpline on **08457 908070** and ask for details of our recommended repair agents.

## BT Accessories and Replacement Items

For a full range of accessories and replacement items for BT products please call **0870 240 5522**, or visit:



## Technical information

### How many telephones can you have on the line?

All items of equipment have a Ringer Equivalence Number (REN) which is used to calculate the number of items that may be connected to any one telephone line.

The BT BT Diverse 5250 (with up to 6 handsets) has a total REN of 1.

Any other instrument provided by BT may be assumed to have a REN of 1 unless stated otherwise.

A total REN of 4 is allowed per telephone line. (For example: if the BT BT Diverse 5250 is used in conjunction with three extension telephones, each with a REN of 1, then the total REN = 4)

Only use approved power supply item code C39280-Z4-C478.

### R&TTE

This product is intended for use within the UK for connection to the public telephone network and compatible switchboards.


This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive (1999/5/EC). In demonstration with the Essential Requirement for efficient use of the radio spectrum, the product complies with TBR6. For a copy of the Declaration of Conformity please contact the BT Diverse Helpline on **08457 908070**.

## Switchboard compatibility

Generally this telephone may be connected to switchboards. In the event of any difficulties please consult your switchboard Service Provider.

### To set the dialling mode

You need only adjust this setting if your switchboard does not operate with the pre-set tone dialling. You can change the dial mode to pulse dialling.

- |   |   |
|---|---|
| <b>MENU</b>   | Press the <b>MENU</b> options button.   |
| <b>↓</b>  | Press the <b>DOWN</b> navigation button until the display shows <b>Base Settings</b> .  |
| <b>OK</b>   | Press the <b>OK</b> options button.   |
| <b>↓</b>  | Press the <b>DOWN</b> navigation button until display shows <b>Additional Features</b> .  |
| <b>OK</b>   | Press the <b>OK</b> options button. Display shows <b>Dialling Mode</b> .  |
| <b>OK</b>   | Press the <b>OK</b> options button.   |
| <b>↓</b>  | Press the <b>DOWN</b> navigation button to select: <ul style="list-style-type: none"> <li>– tone (with TBR)</li> <li>– pulse (with Earth Recall)</li> <li>– tone-Earth (tone with Earth loop recall)</li> </ul> |
| <b>OK</b>   | Press the <b>OK</b> options button to confirm. The display shows <b>Entry Saved</b> .   |
|  | Press the <b>RED PHONE</b> button until you reach the idle display.   |

**BT Diverse Helpline – 08457 908 070**

### Helpline

*If you are experiencing difficulty, please call the BT Diverse Helpline on **08457 908070**.*

### Note

*100 MS is the standard setting for most UK switchboards.*

### To set the recall time

You need only adjust this setting if your switchboard requires a different recall time to the pre-set recall time of 100ms.

**MENU** Press the **MENU** options button.

↓ Press the **DOWN** navigation button until the display shows Base Settings.

**OK** Press the **OK** options button.

↓ Press the **DOWN** navigation button until the display shows Additional Features.

**OK** Press the **OK** options button.

↓ Press the **DOWN** navigation button until the display shows Recall.

**OK** Press the **OK** options button.

↓ Press the **DOWN** navigation button to select the recall time 80, 100, 120, 180, 250, 300ms, 600ms or 800ms.

**OK** Press the **OK** options button to confirm. The display shows Entry Saved.

 Press the **RED PHONE** button until you reach the idle display.

### To switch temporarily from pulse to tone dialling

If you are using pulse dialling with your switchboard but need tone dialling to use certain functions on your BT Diverse 5250 you can switch to tone dialling during the call.

*During your call:*

**MENU** Press the **MENU** options button.

↓ Press the **DOWN** navigation button until the display shows Tone dialling.

**OK** Press the **OK** options button. Tone dialling is now active.

 Press the **RED PHONE** button until you reach the idle display.

### Note

*This setting is only for the duration of the call.*

## Setting pauses


### Note


*If you want to insert a pause into a telephone number you are storing in your directory, start storing the number (see page 16) and where a pause is needed press **and hold** the **RECALL** button, the pause is added and stored with the number.*


### To set a pause before dialling


You can insert a pause to allow your switchboard time to get a line before your BT Diverse 5250 dials the number.

**MENU** Press the **MENU** options button.

 Press the **8** button.

 Press the **9** button.

 Press the **1** button.

 Press the **1** button.



Enter the number for the pause length (e.g. **4** for 6 seconds.):

**1** = 1 second

**2** = 2 seconds

**3** = 3 seconds

**4** = 6 seconds.


**OK** Press the **OK** options button to confirm the setting. 'Entry Saved' is displayed.


### To set a pause after pressing Recall


You can set the length of a pause that is inserted after pressing the **RECALL** button.




**MENU** Press the **MENU** options button.

 Press the **8** button.

 Press the **9** button.

 Press the **1** button.

 Press the **2** button.



Enter the pause length:

**1** = 800ms

**2** = 1600ms

**3** = 3200ms

**OK**

Press the **OK** options button to confirm the setting.



# Index

<b>Additional handset and bases</b>	54	<b>Ring Back</b>	27
<b>Answering machine</b>		withhold your number	26
answer and record	40	Voice Mail	29
answer delay	44	<b>Calls list</b>	23
answer only	41	copy to directory	25
on/off	47, 49	delete a call	25
outgoing messages	40	delete complete list	25
delete	43	dial a number from	24
play	42, 48, 50	display status of call	24
select	43	display time of call	24
recording outgoing message	41	<b>Calls</b>	
using via handset	41	end	14
<b>Auto talk on/off</b>	33	external	14
		handsfree	15
<b>Base station PIN</b>	37, 38	holding	22
<b>Base station reset</b>	38	internal	21
<b>Batteries</b>		making	14
charging	12	on hold	22
installing	11	receiving	15
performance	12	redial	19
replacing	12	secrecy	20
warning beeps	12	transferring	21
<b>Beeps and tones</b>	33	<b>Character map</b>	17
<b>Belt clip</b>	13	<b>Date set</b>	13
<b>Call screening</b>	46	<b>Delete</b>	
<b>Call timer</b>	14	all directory numbers	19
<b>Call Waiting</b>	26	Calls list call	25
<b>Caller Display</b>	23	complete Calls list	25
<b>Calling Features</b>	23	directory entry	19
Call Divert	28	redial list	20
Caller Display	23	<b>De-register handset</b>	56
Calls list	23	<b>Dialling mode</b>	60
Call Waiting	26	<b>Directory</b>	16
		character map	17

delete all entries	19	<b>L</b> anguage change	32
delete an entry	19	Loudspeaker volume	48
dial a number	19	<b>M</b> ain menu	4
edit an entry	18	Making calls	14
extra directory	19	Melody	
store name and number	19	base	37
view an entry	18	handset	31
Display icons	7	Message length	45
<b>E</b> arpiece volume	31	Message playback	
Ending calls	14	base	48
External calls	14	handset	50
Extra directory	19	<b>O</b> n/off	
<b>G</b> uarantee	59	answering machine	47, 49
<b>H</b> andset		auto talk	33
beeps and tones	33	beeps and tones	33
change internal number	35	handset power	14
display	11	keyguard	34
melody	31	key tones	33
naming	34	secrecy	20
on/off	14	<b>P</b> age a handset	21
reset	34	Pause	62
ringer	31	Phone socket	13
Handset quick guide	6	PIN	37, 38
Handsfree	15	Playback messages	48
Help	57	new message indicator	48, 50
Holding calls	22	pause	62
<b>I</b> nternal calls	21	repeat current message	51
Internal number – change	35	play next message	48, 50
Interrupt a call	49	skip forward	48, 51
<b>K</b> eyguard	34	skip backward	48, 51
Keytones on/off	33	delete	48, 51
		delete all	48, 51

copy telephone number to directory	51	<b>S</b> afety instructions	9
Power connection	10	Secrecy	20
Preparatory dialling	14	Setting up	10
Pulse dialling	61	SMS	
<b>Q</b> uick access button setting	46	refer to your separate SMS guide	
Quick guide		Switchboard compatibility	60
display	7	<b>T</b> echnical information	60
handset	6	Telephone line cord	13
<b>R</b> ange warning	12	Time – set	13
Repeater mode – set	39	Tone dialling	61
Recall time	61	Transferring calls	21
Receiving calls	15	<b>V</b> oice Mail	29
Redial	19	retrieve messages	30
copy to directory	20	set one-touch access	29
delete	20	set up quick access behind switchboard	29
dial number in redial list	19	Volume	
Registering	54	base loudspeaker	36
additional handsets	54	base ringer	36
manually	55	earpiece	31
Remote access	53	handset ringer	31
REN, how many phones can I have?	60	handsfree	15
Reset			
base settings	38		
handset settings	34		

Visit us at [www.bt.com](http://www.bt.com)



## Offices worldwide

The telecommunications services described in this publication are subject to availability and may be modified from time to time. Services and equipment are provided subject to British Telecommunications plc's respective standard conditions of contract. Nothing in this publication forms any part of any contract.

© British Telecommunications plc 2003.  
Registered Office: 81 Newgate Street, London EC1A 7AJ.  
Registered in England No. 1800000.  
BT Diverse 5250 (05/03) 5  
Designed and produced by The Art & Design Partnership Ltd.

Siemens number: A31008-C150-P101-1-7619

**CE 0682**

CE compliant to R&TTE Directive (1999/5/EC)